


























LED STATUS LIST

STATUS	Printer Status
2 — - 1  Green	In the online mode
2 — - 1  Green	In a pause state
2  Green 1  Orange	Paper jam
2  Red 1  Orange	Paper end
2  Red 1  Red	Cover (Thermal head) open error
2  Orange 1  Red	Head high temperature error

STATUS	Printer Status
2  Orange 1  Orange	Ribbon end or Ribbon error (For thermal transfer models)
2  Green 1  Red	Communication error (RS-232C)
2  Green 1  Red	Command error
2  Green 1  Red	Flash ROM on the CPU board error or USB memory error
2  Green 1  Red	Cutter error (With optional cutter)
2  Orange 1  Red	The printhead is broken

—	OFF
	Lighting

	Slow-speed blinking (2.0sec)
	Medium-speed blinking (1.0sec)
	Fast-speed blinking (0.5sec)