



**sewoo**

**SEWOO TECH CO., LTD.**

374-2, Gajang-dong, Osan-si, Gyeonggi-do, 447-210, Korea  
TEL : +82-31-459-8200 FAX : +82-31-459-8880  
[www.miniprinter.com](http://www.miniprinter.com)



**MODEL : LK-P21B**

MOBILE PRINTER

“Made for iPod,” “Made for iPhone,” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone or iPad may affect wireless performance.



**Disposal of Old Electrical&Electronic Equipment(Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste.


Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronics equipment. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.





## Table of Contents

1. Unpacking	2
2. Product overview	3
3. Usage and Installation	4
3-1. Control panel usage	4
3-2. Battery Installation	5
3-3. Battery removal	6
3-4. Battery charging	7
3-5. Battery charger usage	8
3-6. Usage of Cigar Jack for charging	9
3-7. Belt clip usage	10
3-8. Roll paper installation	11
3-9. Leather case usage	12
3-10. Self test	13
3-11. MSR usage	15
4. Peripherals connection	16
4-1. Bluetooth connection	16
4-2. Interface cable connection	17
5. Printer specification	18
5-1. Specification	18
7. Certification	19
8. Setting up the software	21

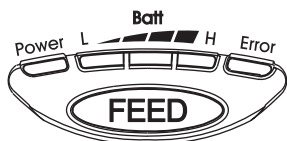
## 3. Usage and Installation

### 3-1 Control panel usage



Button	Name	function
	Power button	This button is used to turn the printer on and off. When the printer is off, press this button for approximately 3 seconds and it will turn on the power. When you press this button in a state that the printer is on, the printer will turn off.
	Paper Feed Button	Paper output can be done manually by pressing this button. Additionally, self-testing and Hexadecimal Dumping can be processed.. 1. Refer to "3-10" for self test information. 2. Refer to the service manual regarding Hexadecimal Dumping.
	Battery Status Lamp	1. If the Batt, LED are Lit, the battery is fully charged. 2. If you can hear beeping sound and LED light is turned off, it means that the battery is at the lowest level. 3. If the battery is not charged at all, the printer turns off automatically.
	Error Lamp	If the red light is turned on, it means there is no paper roll or the paper cover is open.

### 3-2 Battery Installation

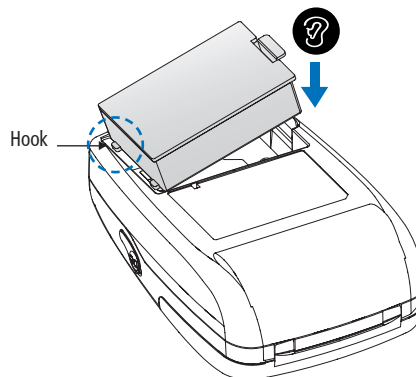


1. Align battery hook as shown in the picture
2. Push the battery into the printer until it locks in place.

#### **NOTE**


As the battery is not charged at the time of your purchase, charge the battery prior to using the printer (Battery charger or Cradle can be used to charge)

### 3-3 Battery removal

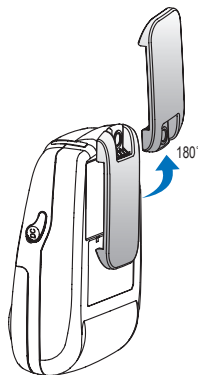


Put up the Belt clip hole turning 180 degree.

1  
2

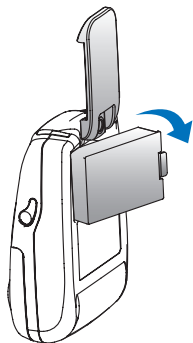

After putting up the belt clip, remove the battery holding it up as shown above.

### 3-4 Battery charging

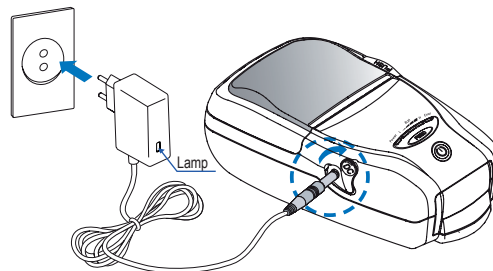

1. Be sure that the printer is turned off
2. After open the DC JACK cover, insert DC JACK into the printer.
3. Plug the power cord to electrical outlet.

#### 3-4-1 The status of lamp in charging


Status	Charging	Charging complete
Charging Lamp	Red	Green

#### NOTE

1. Unless the exclusive charger is used provided by the manufacturer, the printer can be damaged, and the manufacturer is not liable for the consequential damage.
2. Before removing the battery, make sure that power is turned off.
3. Printer does not work in the status of being connected with charger only.
4. The battery should be installed to operate printer.
5. While charging, do not turn on the power.
6. Do not operate the print while charging the battery.
7. Do not connect the charger while the printer is operated.

### 3-5 Battery charger usage

Optional

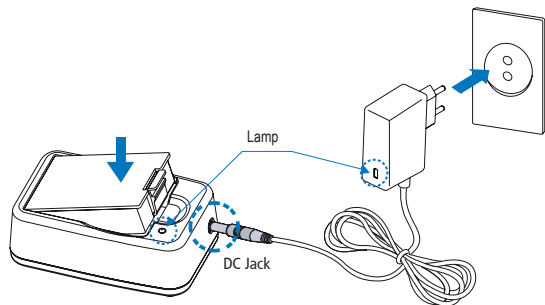

1. Insert the battery into the battery holder as shown above
2. Connect the DC JACK to the power electrical outlet.
3. Plug the power code into the electrical outlet.
4. Once the charging is completed, remove the battery from the holder.

#### 3-5-1 The status of lamp in charging



Status	Charging	Charging complete
Charging Lamp	Red	Green

#### NOTE

In the case the battery is not fixed properly in the holder, the red lamp will be blinking. Then, extract and reinsert the battery.

### 3-6 Usage of Cigar Jack for charging

Optional

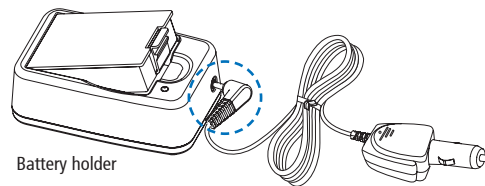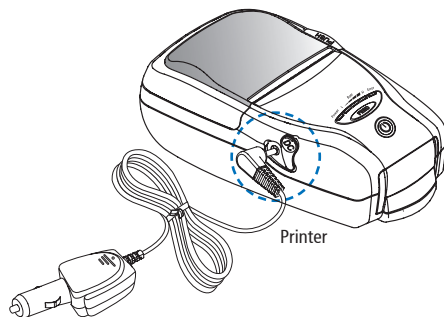


Connect the car cigar JACK charger into the printer or battery holder.

Input	12 ~ 24V
Output	8.4V 0.8 ~ 1.2A

#### NOTE


Use the Cigar Jack offered by the manufacturer.

### 3-7 Belt Clip usage

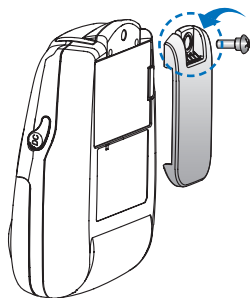


Insert the belt clip screw into the hole of Belt clip

1  
2


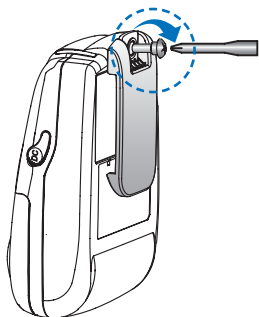


As shown in the picture, tighten the screw with a screw driver.

### 3-8 Roll Paper installation

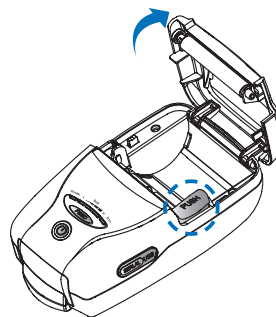


Press the PUSH button to open the paper cover

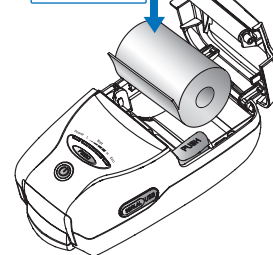


Insert the paper in the right direction

1 2  
3 4

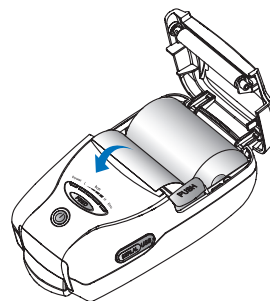

Pull a short length of paper out of the printer and close the cover.

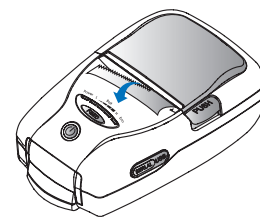


Tear off the additional paper using tear bar.

### 3-9 Leather case usage

Optional




Open the leather case

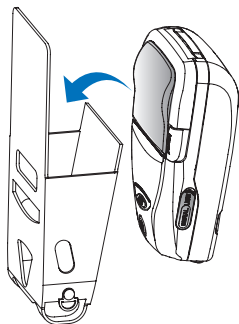


Place the printer into the leather case

1 2  
3 4

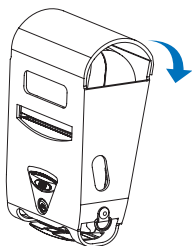


Close the Velcro and stick the cover.

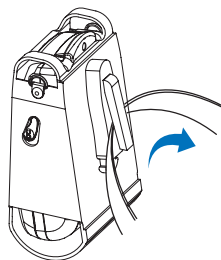


Fasten to the belt by using the clip at the rear of the leather case

### 3-10 Self Test

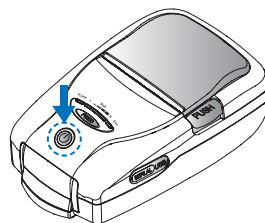

Turn off the power pressing the power button for approximately 3 seconds.

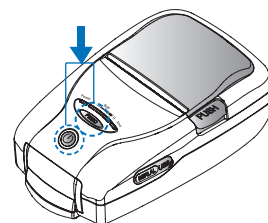


While you are pressing the FEED button, press the power button

1 2  
3

#### NOTE

1. To print ASCII pattern additionally, press the Feed button once more
2. After printing ASCII pattern, the self test will be finished automatically.
3. If the Feed button is not pressed to print ASCII pattern, self test will be finished automatically after 30 seconds.

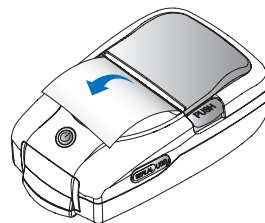

The printout is produced.






## 4. Peripherals connection

This printer can communicate with Peripherals device via Bluetooth and cables.

### 4-1 Bluetooth Connection

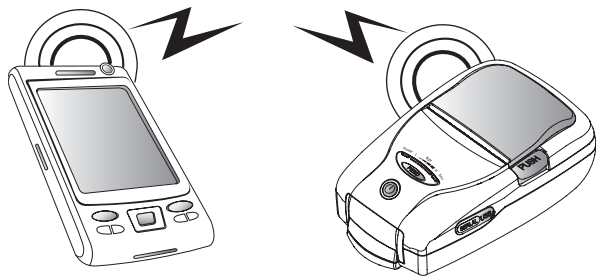


1. Printer can be connected to the PDA and PC which can do wireless communication.
2. By using Bluetooth function supported in PC, printer can be connected.

**✓ NOTE**

Refer to the Bluetooth Manual for more details on connection.

### 4-2 Interface Cable Connection

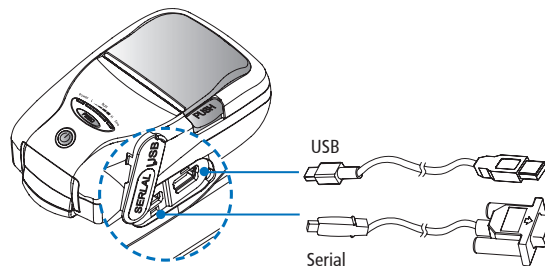

1. Connect USB or Serial cable into the cable connector on the printer.

**✓ NOTE**

Use the cable offered by the manufacturer (USB, Serial)

2. Connect the interface cable into the USB or Serial port of the device (PDA, PC, etc.)

## 5. Pritner Specification

### 5-1 Specification

Printing Method		Direct Thermal
Printing Speed		80mm/sec
Resolution		203 DPI X 203 DPI
Character		Font A (12X24), Font B (9X17)
Character per line		Font A : 32 columns , Font B : 42 columns
Character set		ALPHA NUMERIC Character, Extension graphic
Barcode		EAN-8, EAN-13, Code39, ITF, UPC-A, Coda bar, Code93, Code128
Emulation		ESC/POS
Driver		Window CE 4.2 & 5.0, Window Mobile 5.0
Sensor		Paper End Sensor , Cover open Sensor
Paper	paper type	Thermal Paper
	width	58mm
	thickness	65 $\mu$
	External Diameter	Max. $\Phi$ 40mm
	Internal Diameter	12.5mm +/-0.5mm
Reliability	TPH	50km
	Battery	Continuous printing: 29min Standby: 10hours 20min Printing length: 130m
Communications		Serial(RS-232C), USB, Bluetooth Class2
MSR (Optional)	Card Standard	ISO7811/2, JIS
	Track	1Track, 2Track, 3Track, JIS-II
	Magnet Head Life	300,000 Passes(minimum)
Battery Charger	input	AC100~240V, 50/60 Hz
	output	8.4V , 800~1400mA
Battery	Battery type	Li-ion
	output	7.4V, 1130mAh
	Charging time	2hours
Size	W X D X H(mm)	96 X 136 X 58
	W X D X H"	3.7 X 5.3 X 2.2
Weight		0.4kg
Temperature	operation	-10 ~ 50 $\text{C}$
	storage	-20 ~ 60 $\text{C}$
Humidity		operation 35 ~ 95%

## 6. Certification

### FCC Information

This device complies with part 15 of the FCC Results. Operation is subject to the following two conditions:

- (1) This Device may not cause harmful interface, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### NOTE

This equipment has been tested and found to comply with the limits for CLASS B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- 1.1. Reorient or relocate the receiving antenna.
- 1.2. Increase the separation between the equipment and receiver.
- 1.3. Connect the equipment into an outlet on a circuit different from that to which receiver is connected.
- 1.4. Consult the dealer or experienced radio/TV technician for help.

### WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## 7. Setting up the software

### ⚠ CAUTION

Antenna shall be mounted in such a manner to minimize the potential for human contact during normal operation. The antenna should not be contacted during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.

The device meets the FCC requirements for radio frequency (RF) radiation exposure in the standard body worn configuration with no minimum configuration. In this configuration, which applies whether the belt clip or shoulder strap is used, the face of the printer from which paper is transported is facing away from the user's body. The standard configuration must always be used when the printer is body worn.

*Please refer to the programming manual included in CD.*